

# MARTINDALE

## MODEL G BLOWER INSTRUCTIONS

### OPERATION:

To use as blower, attach the tapered nozzle to the discharge opening of the blower, and the protective screen lock to the air intake opening.

To use as a suction cleaner, attach the dust bag to the air discharge opening. Remove the protective screen lock from the air intake opening and attach the swivel end of the hose by turning the swivel until it is secure. Attach the desired nozzle to the other end of the hose.

### MAINTENANCE:

The carbon brushes should be checked periodically and replaced when worn down to approximately 3/8" long. To check the brushes, unscrew the screws holding the brush cap guard. Unscrew the brush cap and remove the brushes. Be sure to note position of the brushes when they are being removed so that if they are still of sufficient length they can be reassembled in the same position.

The bearings are prelubricated and sealed and do not require further lubrication.



## **MODEL G GENERAL-DUTY BLOWER PARTS LIST**

<b>PART NO.</b>	<b>DESCRIPTION</b>
2663	Bearing, Ball
2681	Washer, Split; for Bearing Cover
2700	Washer, Felt; for Cover
2842	Cap, Brush
2909	Holder, Carbon Brush
2910	Armature, 115V.; Less Bearing
2911	Armature, 115V.; With Bearing
2912	Coil, Field, 115V.; Complete
2915	Brush, Carbon; with Spring
2917	Plate, Cover, Aluminum
2929 P	Housing, Motor; with Brush Holder & Set Screw
3342	Guard, Cap, Brush
3346	Switchbox, Aluminum; only
3350 A	Switchbox Assembly
3379	Switch
3404	Grommet, Rubber, 3/8" Hole
3415	Cable, Conductor, #18/3, 20"; with Plug
3870	Fan, Impeller, Aluminum
3920-1	Gasket, Rubber; for Screenlock & Nozzle
4720	Chamber, Fan
4762	Screenlock
4960-2	Handle, Aluminum
5766	Screw, 10/24 x 2-1/2"; to hold coil in housing
5764 W	Screw, 10/24 x 7/16"; for handle
5807	Screw, 8/32 x 3/8"; to hold housing on base
6800	Nozzle, Blower, Plastic
9417	Bushing