

MARTINDALE

MODEL H BLOWER INSTRUCTIONS

OPERATION:

To use as blower, attach the tapered nozzle to the discharge opening of the blower, and the protective screen lock to the air intake opening.

To use as a suction cleaner, attach the dust bag to the air discharge opening. Remove the protective screen lock from the air intake opening and attach the swivel end of the hose by turning the swivel until it is secure. Attach the desired nozzle to the other end of the hose.

MAINTENANCE:

The carbon brushes should be checked periodically and replaced when worn down to approximately 3/8" long. To check the brushes, unscrew the screws holding the brush cap guard. Unscrew the brush cap and remove the brushes. Be sure to note position of the brushes when they are being removed so that if they are still of sufficient length they can be reassembled in the same position.

The bearings are prelubricated and sealed and do not require further lubrication.



MARTINDALE

MODEL H GENERAL-DUTY BLOWER PARTS LIST

PART NO.	DESCRIPTION
3353-2	Caution Plate; for Switchbox
2208	Cover, Aluminum
2663	Bearing, Ball
2681	Washer, Split; for Bearing Cover
2701	Washer, Felt; for Cover
2725	Armature, 115V., Without Bearing
2726	Armature, 115V. With Bearing
2727	Coil, Field, 115V., Complete; 2 Speed
2727 S	Coil, Field, 115V., Complete; Single Speed
2711	Brush & Spring, Carbon
2722	Washer, Steel, Split
2745	Armature, 230V.; Without Bearing
2746	Armature, 230V.; With Bearing
2747	Coil, Field, 230V, Complete; 2 Speed
2828	Holder, Brush, Carbon; With Bearing
2842	Cap, Brush
2884	Housing, Motor, Aluminum; With Brush Holders
3352	Guard, Cap, Brush
3353	Switchbox, Aluminum; only
3353 A	Switchbox Assembly
3379	Switch; for Single Speed
3404	Grommet, Rubber, 3/8" Hole
3415	Cable, Conductor, #18/3, 20"; with Plug
3455	Plate, Baffle
3875	Fan, Impeller, Aluminum
3879	Switch; for 2 Speed
3920-1	Gasket, Rubber; for Screenlock & Nozzle
4725	Chamber, Fan
4762	Screenlock
4831	Adapter, Pipe, 2"; Used on FPB Blower
4970	Handle, Aluminum; Complete
5773	Screw, 10/24 x 2-1/2"; to hold coil to housing
5764 W	Screw, 10/24 x 7/16"; to hold base to housing
6800	Nozzle, Blower, Plastic
9222 A	Connector, Swivel, 2"; Connects Hose to Blower
9296	Gasket; Between Fan Chamber & Housing
9417	Bushing
9927	Washer, Fiber; for Brush Cap