



## ***ARMATURE SLOT INSULATION FOLDER - MODEL INFLRC***

Fasten the Insulation Folder to the top of bench with wood screws or bolts.

Note: Allen Head Wrench for making all adjustments is conveniently located on left side of unit.

### **TO ADJUST FOR WIDTH OF TROUGH:**

In setting up for operation, the first adjustment is for desired width of trough. Loosen Allen Head Set Screws in both Creasing Rollers and slide on shaft to desired width using graduations on top of Scale.

### **TO ADJUST GUIDE BRACKETS:**

To adjust the Guide Brackets for width of insulation strips, loosen the Thumb Screws and Slide Brackets to desired width, using graduations on bottom of scale, then tighten Thumb Screws.

### **TO ADJUST FOR VARIOUS THICKNESSES OF INSULATION:**

Two Thumb Screws located at either end of the Roller Guide Supporting Shaft, raise or lower this Shaft for various thicknesses of insulation. For thicker insulation, these should be turned farther down to provide more pressure between Creasing Rollers and Polyurethane Roller. Creasing Rollers should always run across the grain of the insulation.

### **LUBRICATION:**

An occasional drop of oil on either end of the Creasing Roller Shaft and Polyurethane Roller Shaft provides for easier operation and longer life.

### **MAINTENANCE and STORAGE**

When not in use, store unit within a plastic bag.

### **WARRANTY**

This equipment is warranted to the original owner against defects in materials and workmanship for ninety (90) days from date of purchase. Any part found to be defective (except by overloading, misuse, neglect, fire, accident, tampering with by unauthorized serviceman, or other cause beyond the manufacturer's control), will be replaced or repaired free of charge.

## **ARMATURE SLOT INSULATION FOLDER - MODEL INFLRC PARTS LIST**

<b>CATALOG NO.</b>	<b>P/N</b>	<b>DESCRIPTION</b>	<b>Quantity Req'd.</b>	<b>Assy. No.</b>
	808095	Base	1	INFL23011
INFLAW	808114	Wrench, Allen	1	
	808108	Screw, Scale	2	
INFL808109	808109	Nut, Scale	2	
INFL35218	808107	Screw, Machine	4	
INFL1111	808199	Plate, Cap	2	
	808023	Screw, Set, Handwheel	2	
	808096	Handwheel	1	
INFL808097	808097	Grip, Hand	1	
INFL808110	808110	Screw, Thumb	2	
INFL1113	808103	Spring, Compression	2	
INFL1112	808099	Block, Bearing	4	
INFL1115	808118	Collar, Roller Shaft	2	
INFL1182	808119	Collar, Creasing Shaft	2	
INFL3449	808111	Rod, Steel	1	
INFL1114	808113	Screw, Rod, Special	2	
INFL808122	808122	Washer, Scale	2	
INFL808112	808112	Nut, Wing	2	
INFL808108	808108	Screw, Scale Clip	2	
INFL808121	808121	Clip, Scale	2	
INFL808102	808102	Scale	1	
INFLK324	808100	Roller, Polyurethane	1	
INFL3452	808116	Bracket, Guide, Left Hand	1	
INFL3451	808115	Bracket, Guide, Right Hand	1	
INFLK814	808101	Shaft, Creasing Roller	1	INFL1176A
INFL133335	808037	Screw, Set	2	
INFL1176	808117	Roller, Creasing	2	
INFL2648	808120	Plug, Brass	2	

**ARMATURE SLOT INSULATION FOLDER - MODEL INFLRC**

